


# 3LOBITE EXTENSION SYSTEM

## INSTALLATION GUIDE JUST FOR QUALIFIED TECHNICIANS



1

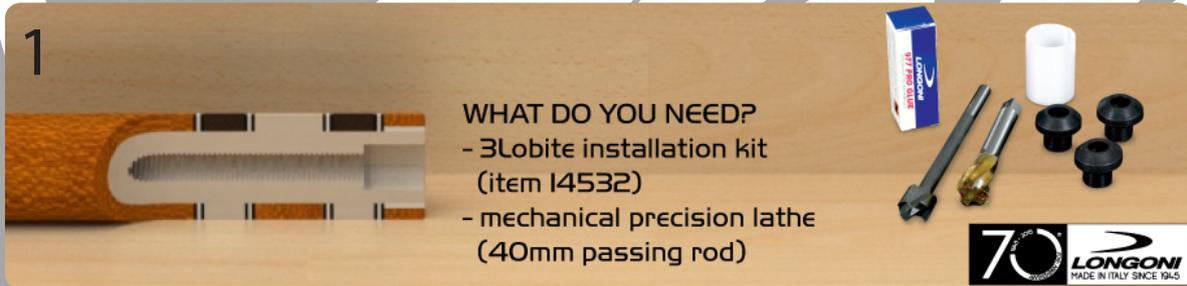

WHAT DO YOU NEED?

- 3Lobite installation kit (item I4532)
- mechanical precision lathe (40mm passing rod)



2




VERIFY SIZE OF YOUR CUE BUTT:

- 28mm, the minimum butt external diameter
- 16mm, the maximum diameter of the existing bumper



3

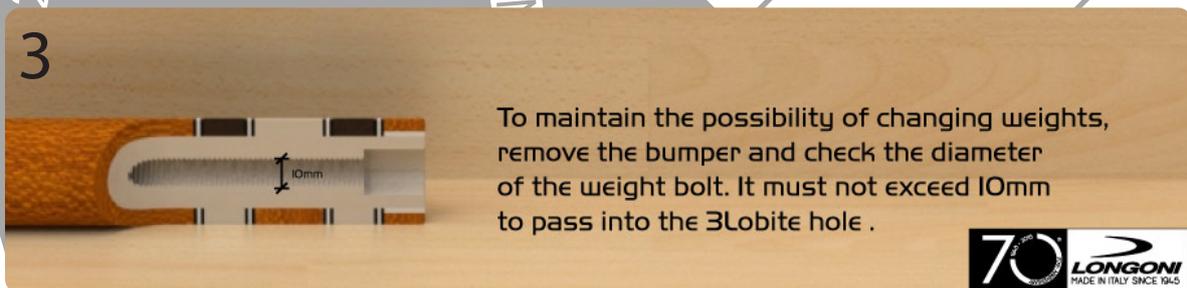

To maintain the possibility of changing weights, remove the bumper and check the diameter of the weight bolt. It must not exceed 10mm to pass into the 3Lobite hole.



4




Put the butt into the lathe with the plastic bush being sure not to scratch the varnish. Drill slowly and constantly the hole for 4mm.



for more info visit  
[WWW.3LOBITE.COM](http://WWW.3LOBITE.COM)


5

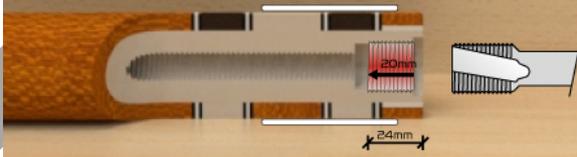

Thread the hole for 20mm, checking that the tool enter straight in the center




6

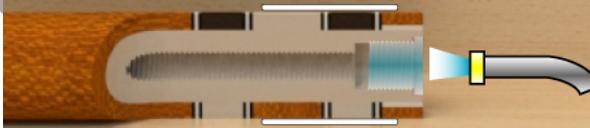

Clean perfectly the hole with compressed air. Check if the 3Lobite component can easily enter till the end by hand without glue.



7

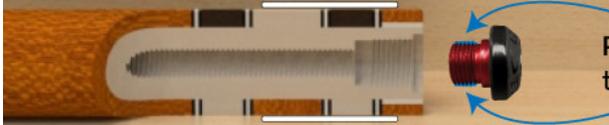

Put 977 glue all around 3Lobite component thread and screw it



8



Insert 3Lobite core with bumper (use extension to screw it) and wait 10 min until glue is completely dried



9

Your cue is ready. It's time to win the game with your 3Lobite system!



for more info visit  
[WWW.3LOBITE.COM](http://WWW.3LOBITE.COM)